

POP-PUMP OUT PLUG

It is available with a variety of threads allowing installation to the bottom of the tubing string to isolate the tubing from the annulus. To remove the plug, pressure is applied to the tubing and the Pump-Out Plug is removed to allow full opening. The pump-out pressure value is easily adjusted in the Field by adding or removing shear screws. Also available with ball seat.



SPECIAL FEATURES

- Ball seat available
- Adjustable shear value (high shear available)
- Special Pump-Out Plug designs available

Tubing Size (inches)	Tool OD (inches)	Tool ID (inches)	Thread Connection Box Up
2-3/8	3.060	2.00	2-3/8 EUE
2-7/8	3.670	2.50	2-7/8 EUE
3-1/2	4.500	3.46	3-1/2 EUE
		2.88	3-1/2 EUE
4-1/2	5.560	4.00	4-1/2 EUE
			4-1/2 LTC
5-1/2	6.000	5.13	5-1/2 LTC
6-5/8	7.390	6.23	6-5/8 LTC
7	7.650	6.60	7" LTC
8-5/8	9.620	8.18	8-5/8 LTC
9-5/8	10.620	9.17	9-5/8 LTC